

Service Information




Model N-550
Serial No. from

No. NR-0020 (1/3)
Date 7/11/78

Subject CONNECTING DIAGRAM FOR N-550 & ADS

1). CONNECTING DIAGRAM FOR N-550 & ADS2002 IN THE CAR

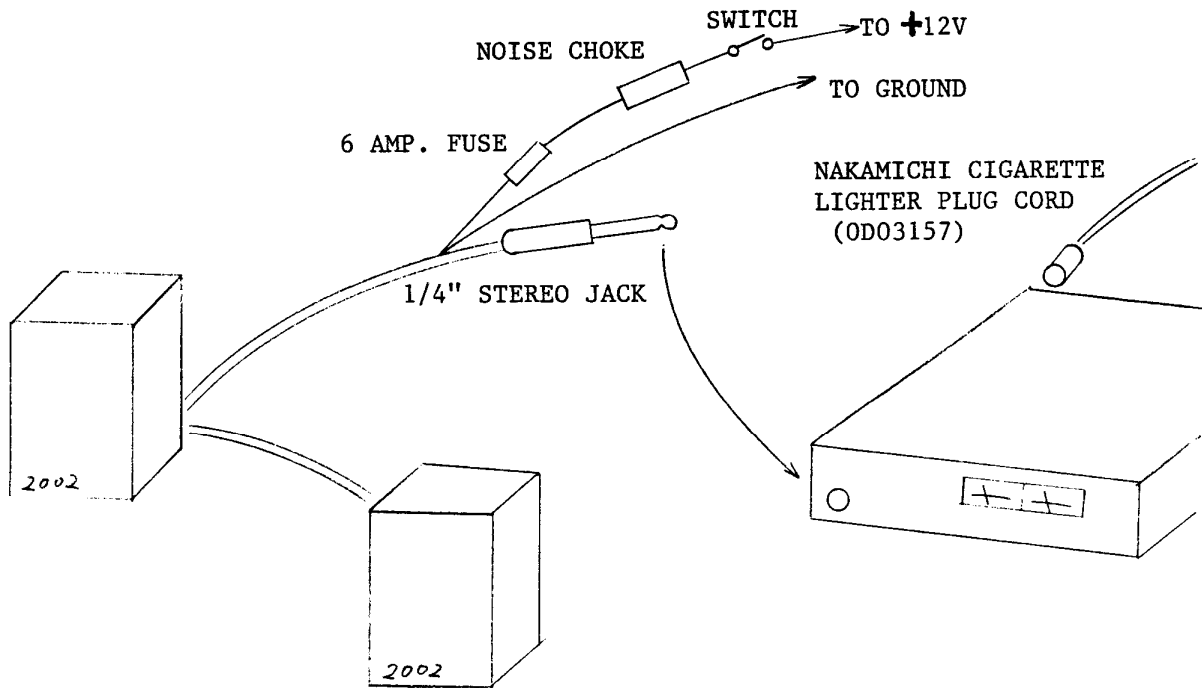


- A) Modify the ADS cable.
1. Cut off the end of the ADS cable.
 2. Wire on the 1/4" stereo phone jack to plug into headphone output of the N-550.
 3. Make the power supply cord like above diagram.

-----COLOR CODE-----
BLACK-----LEFT CANNEL
RED-----RIGHT CHANNEL
BARE-----AUDIO GROUND
WHITE-----PLUS 12V
GREEN-----POWER GROUND
YELLOW-----NOT USED

- B) Use the green lead and the white lead to supply power to the ADS2002.
C) Use the Nakamichi Cigarette Lighter Plug Cord to supply power to the Nakamichi 550.
(or Use internal battery pack)


2). CONNECTING DIAGRAM FOR N-550 & ADS2002PSA IN HOME.

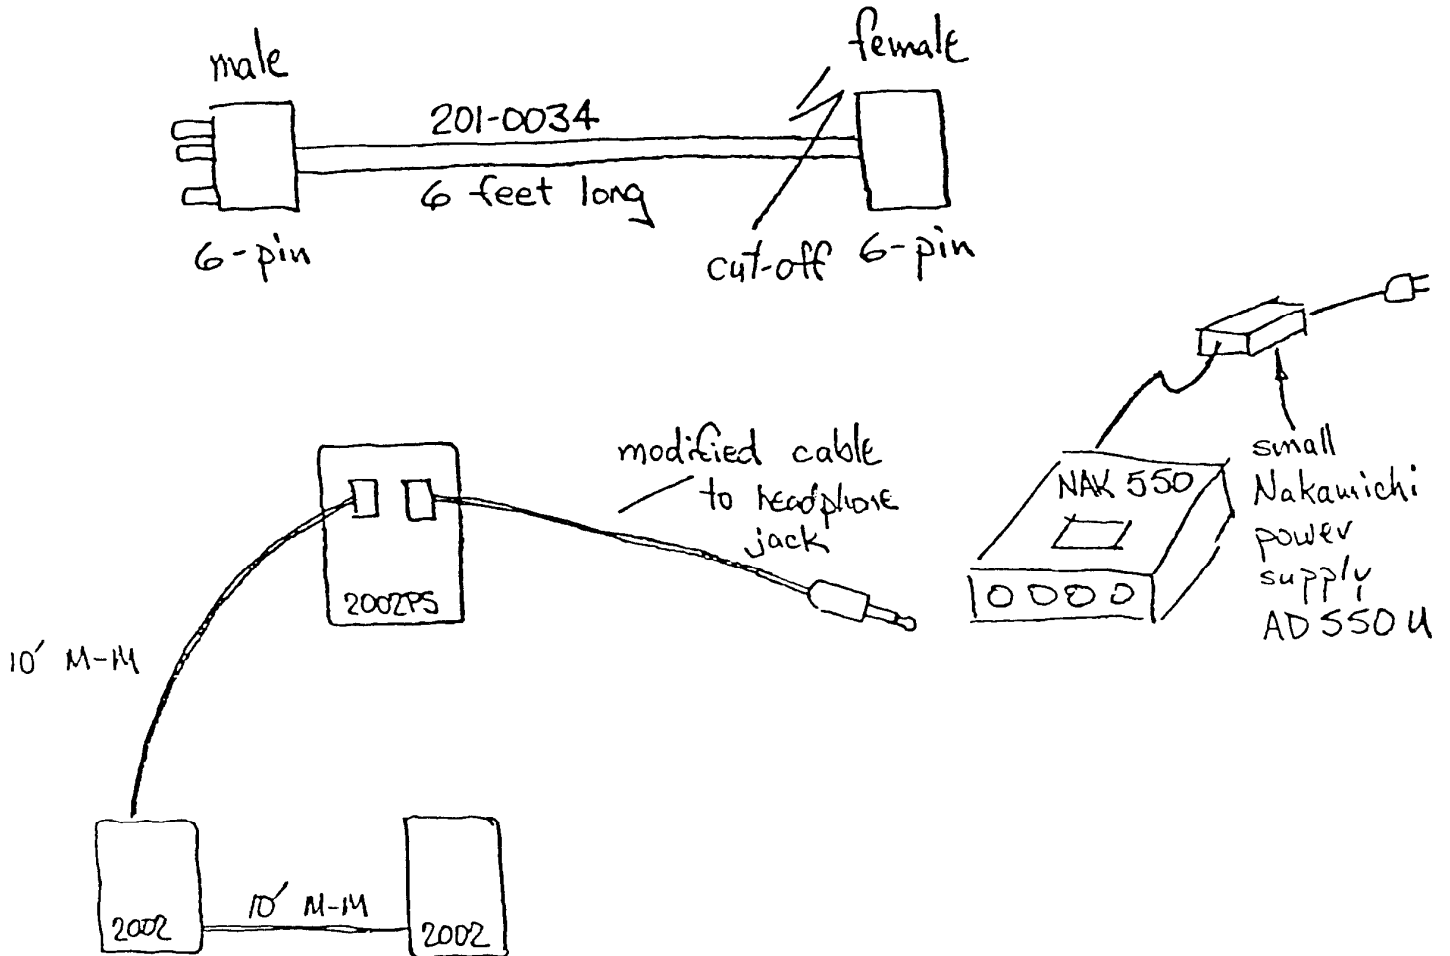

The only difference between the 2002PS and 2002PSA is one cable!
If you have the male to female 6 foot, 6 pin cable cut off female end
and wire on a headphone jack to be plugged into NAK 550 headphone output
Wire as follows:

- Black left channel
- Red right channel
- Bare audio ground
- Green no connection
- Yellow and White solder together

3). CONNECTING DIAGRAM FOR N-550 & ADS2002PS IN HOME

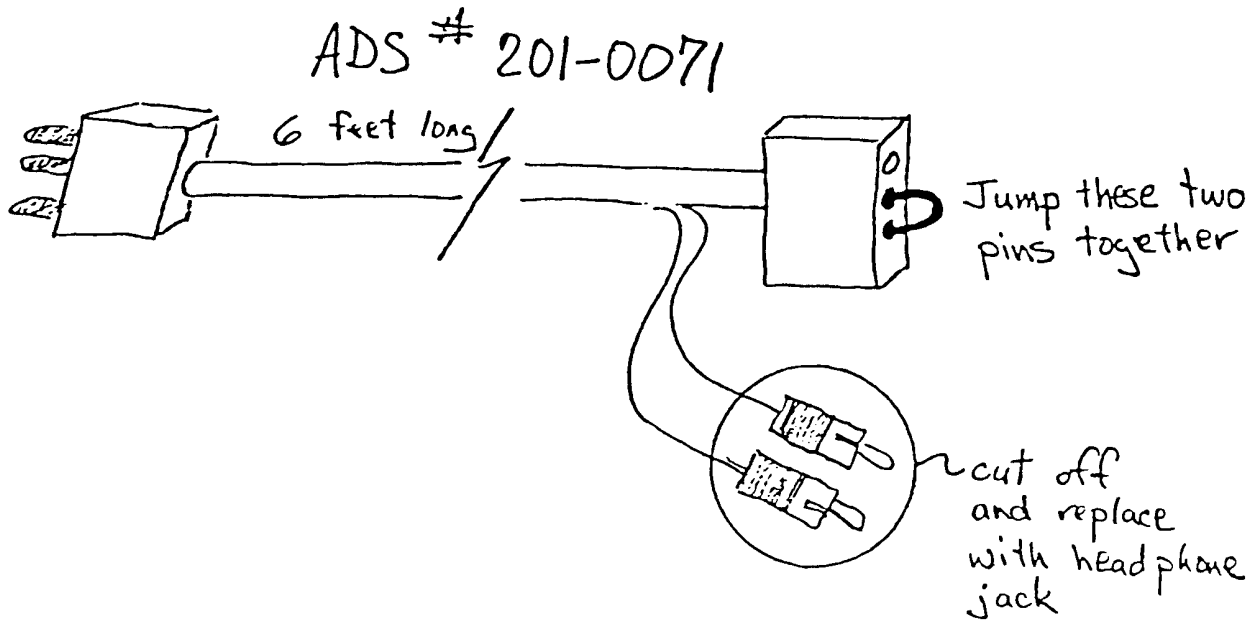

The only difference between the 2002PS and 2002PSA is one cable!

If you have the 6 foot cable pictured above, proceed as follows:

Cut off RCA jacks and replace with headphone jack

Jump together the middle two pins of the four pin Molex connector as shown above

Plug the 6 pin end of your modified cable into 2002PS, and the headphone jack into the NAK550. The 2002 speakers will be on whenever the 2002PS is on and the Headphone volume control will be the volume control for the overall system. The NAK550 should be powered by its own small power supply, the NAK AD550U.